



### **LSR ANTI FADE LOCKNUTS**

Before installing, Put your brake Rotor on the hub using your stock hardware. Slide the anit-fade assembly onto the axle and into the bearing housing. Next install the snap ring around the axle. Back the dome away from the hub until snug against the snap ring. Now give the dome an extra 1/4 to 1/2 turn with the tool. Tighten pinch bolts and check frequently to ensure long life.

**LONE STAR RACING 1-800-4LS-RACE WWW.LSRACING.COM**



### **LSR ANTI FADE LOCKNUTS**

Before installing, Put your brake Rotor on the hub using your stock hardware. Slide the anit-fade assembly onto the axle and into the bearing housing. Next install the snap ring around the axle. Back the dome away from the hub until snug against the snap ring. Now give the dome an extra 1/4 to 1/2 turn with the tool. Tighten pinch bolts and check frequently to ensure long life.

**LONE STAR RACING 1-800-4LS-RACE WWW.LSRACING.COM**



### **LSR ANTI FADE LOCKNUTS**

Before installing, Put your brake Rotor on the hub using your stock hardware. Slide the anit-fade assembly onto the axle and into the bearing housing. Next install the snap ring around the axle. Back the dome away from the hub until snug against the snap ring. Now give the dome an extra 1/4 to 1/2 turn with the tool. Tighten pinch bolts and check frequently to ensure long life.

**LONE STAR RACING 1-800-4LS-RACE WWW.LSRACING.COM**



### **LSR ANTI FADE LOCKNUTS**

Before installing, Put your brake Rotor on the hub using your stock hardware. Slide the anit-fade assembly onto the axle and into the bearing housing. Next install the snap ring around the axle. Back the dome away from the hub until snug against the snap ring. Now give the dome an extra 1/4 to 1/2 turn with the tool. Tighten pinch bolts and check frequently to ensure long life.

**LONE STAR RACING 1-800-4LS-RACE WWW.LSRACING.COM**



### **LSR ANTI FADE LOCKNUTS**

Before installing, Put your brake Rotor on the hub using your stock hardware. Slide the anit-fade assembly onto the axle and into the bearing housing. Next install the snap ring around the axle. Back the dome away from the hub until snug against the snap ring. Now give the dome an extra 1/4 to 1/2 turn with the tool. Tighten pinch bolts and check frequently to ensure long life.

**LONE STAR RACING 1-800-4LS-RACE WWW.LSRACING.COM**



### **LSR ANTI FADE LOCKNUTS**

Before installing, Put your brake Rotor on the hub using your stock hardware. Slide the anit-fade assembly onto the axle and into the bearing housing. Next install the snap ring around the axle. Back the dome away from the hub until snug against the snap ring. Now give the dome an extra 1/4 to 1/2 turn with the tool. Tighten pinch bolts and check frequently to ensure long life.

**LONE STAR RACING 1-800-4LS-RACE WWW.LSRACING.COM**